

User Manual

SPE 500 Disinfectant and Liquid Soap Dispenser with integrated adapter and lever

Compatible with bottles from leading disinfectant manufacturers.

Before installation, please note:

Unpack the box, remove the dispenser's plastic packaging, and make sure the following parts are included:

- 1 dispenser with integrated adapter
- lever to be mounted on the dispenser
- 1 wall plate for wall mounting (not necessary if a suitable back panel is already available and installed)
- 1 drip tray (to be attached after the dispenser is installed)
- 1 bag containing a set of three screws and anchors, as well as one metal strip
- 1 User manual in english


Note: Determine the dispenser's position before installation

- If desired, the dispenser may be installed above a sink (not necessary thanks to the inclusion of a drip tray)
- If installing above a sink, leave approx. 15 to 20 cm from the bottom edge of the dispenser
- Recommended mounting height on the wall is approx. 120 cm from the floor to the bottom edge of the dispenser
- If installing in hallways or corridors, choose a height that prevents collision between the dispensers and ward carts or similar items

Container	Size	Item No.
SPE 500		
wall-mounted dispenser with integrated ESH adapter	500 ml	00-918-007

Assembling and Installing the Dispenser


①

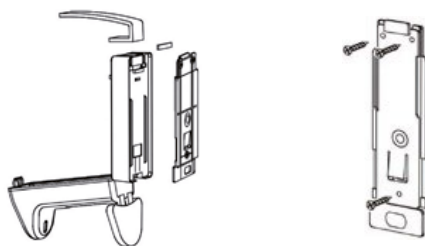

To save space, the dispenser is shipped with the lever not yet mounted. To install the lever, insert it into the back of the dispenser and press in until it audibly clicks into place; insert the metal strip to secure the lever. The strip also serves as the upper mounting point for the dispenser onto the wall plate. Secure the wall plate with anchors and screws. Slide the dispenser over the wall plate from above until the locking tab audibly clicks into place.

Start


②

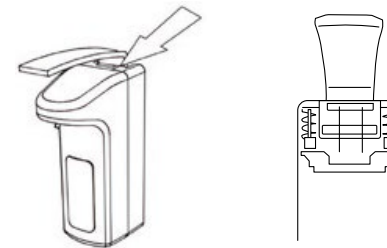

Open the dispenser by pressing the push button at the top under the control lever and folding the lid forward.

Cleaning the Dispenser

③

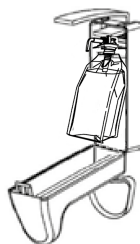

Insert the ESH Vacu-Bag with integrated pump into the housing; close the housing lid and attach the drip tray. When using for the first time, press the lever down completely several times until liquid emerges from the pump. Collect this liquid in a suitable container.

The dispenser is generally maintenance-free, but should be cleaned regularly and, if necessary, disinfected in accordance with infection prevention and hygiene recommendations. Clean the housing only with a mild detergent; if desired, follow up with a surface disinfectant. The housing can also be cleaned in a suitable dishwasher.

